



Whats App



Email

User Manual

C16


Made in China



INTRODUCTION

Action Camera is a high-definition digital motion video recording device, created to reach market demand. It has a wide variety of the leading features for digital video recording, photo shooting, audio recording with screen display and detachable battery. Best suitable for vehicle recording, outdoor sports, home security, diving and more related activities. Allowing you to enjoy the moments while capturing every scene anytime, anywhere.

PRODUCT OVERVIEW

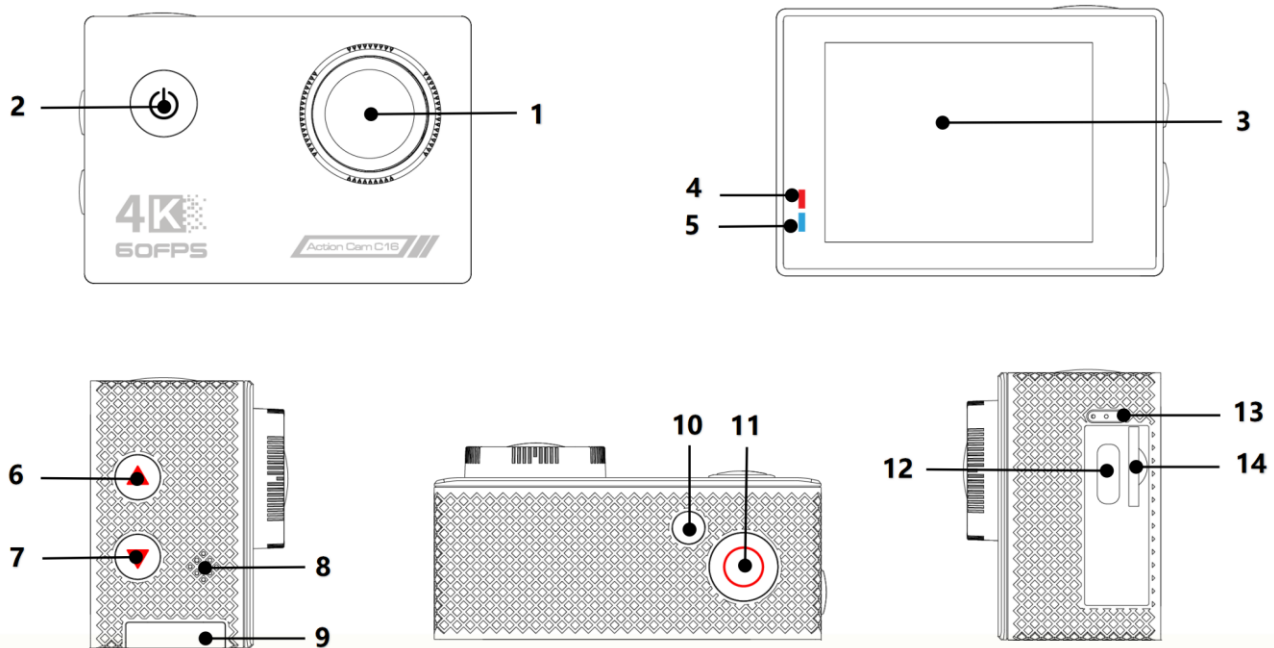

■ Product Instructions

- | | |
|-----------------------------------|-------------------------------------|
| 1. - Lens | 8. - Speaker |
| 2. - Power / Mode / Return Button | 9. - Battery Door |
| 3. - 2.0-inch IPS Screen | 10. - Working Indicator |
| 4. - Charging Indicator | 11. - Rec / Shutter / Select Button |
| 5. - Working Indicator | 12. - Type-C Port |
| 6. - Up / Wi-Fi / Setting Button | 13. - Built-in Mic |
| 7. - Down / Playback Button | 14. - SD Card Slot |

■ Button Operation Instructions

● **Power Button / Mode Button:**

- In the OFF state, shortly press the Power Button to turn on the camera.
- In the ON state, press and hold the Power Button for seconds to turn off the camera.
- In preview mode, short press the power button to cycle between video and photo mode.
- In settings mode, short press the power button to cycle between video settings mode, photo settings mode, and system settings mode.
- In Playback / Mode-Selection mode, press the Power Button shortly to return to the previous option.

- **Shutter Button / Select Button:**

- In video mode, press the Shutter Button shortly to start/stop recording video.
- In photo mode, press the Shutter Button shortly to capture photos.
- In video / photo mode, press and hold the Shutter Button for seconds to enter into mode selection menu.
- In the setting / playback mode, press the Shutter Button shortly to select the desired option.
- In the video playback mode, press the Shutter Button shortly to start/pause play-backing the video file.

- **Up Button:**

- In video/Photo mode, press shortly the Up Button to enter into the Video/Photo Setting Mode.
- In video/Photo mode, press and hold the Up Button for seconds to turn on the camera's Wi-Fi.
- In Wi-Fi mode, press shortly the Up Button to turn off the camera's Wi-Fi.
- In the playback mode / sub-setting menu / mode selection menu, press the Up Button shortly to switch to the previous option.
- In the video /photo playback mode, press and hold the Up Button for seconds to enter into file delete menu.

- **Down Button:**

- In video/Photo mode, press shortly the Down Button to enter into the Playback Mode.
- In the playback mode / sub-setting menu / mode selection menu, press the Down Button shortly to switch to the next option.

GETTING STARTED

Hello!

Welcome to your new camera. To capture video and photos, you need a micro SD card.

■ Storage / Micro SD Card

We strongly recommend to use the branded memory cards purchased from regular channels for maximum reliability and stability during recording and in high vibration activities.

Use brand name memory cards that meet these requirements:

- micro SD, micro SDHC, or micro SDXC
- **UHS-III rating** at least for 4K Video resolution
(at least 60MB/S or above read and writing speed)
- Capacity up to 128GB (FAT32)

Notes:

- ✧ Please format the micro SD card first in this camera before using.
- ✧ To keep your micro SD card in good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your content first.
- ✧ FAT32 format Micro SD card stops recording when the storage of each file is over 4 GB and starts to record again on a new file.

■ Powering On / Off

● **Power On:**

Press the Power Button shortly. The camera beeps while the camera status light is on. When information appears on the screen, your camera is on.

● **Power Off:**

Press and hold the Power Button for seconds. The camera beeps while the camera status light is off. When information disappears on the screen, your camera is off.

■ Start / Stop recording video

To record video, verify the camera is in desired Video Setting option, such as Loop Video/Time-lapse/Slow Motion etc.

● **To Start Recording:**

Press the Shutter Button. The camera's blue working indicator will flash and the red record time will show on the screen while recording.

● **To Stop Recording:**

Press the Shutter Button. The camera working indicator stop flashing on the screen to indicate recording has stopped

Notes:

- ✧ This camera automatically stops recording when the battery is out of power. Your video will saved before the camera powers off. The video will not be saved, and even the video will be damaged, if the batter is took out or loss power during recording.
- ✧ Due to the battery's characteristics and environmental temperature requirements, such as high temperatures can cause the battery to expand. In high temperature environments, especially in the summer, when you use this camera as a dash camera, we strongly recommend that you remove the battery and use the car power directly, but when the car's engine is turned off, the camera will immediately turn off, the date&time set and last video recorded will not be saved
- ✧ This camera automatically stops recording when the SD card is full, if the looping record function is turn off.

■ Capture photos


To capture photo, verify the camera is in desired Photo Setting option, such as Time-lapse Photo/burst photo/Self-Timer photo etc.

● **To capture photos:**

Press the Shutter Button. The camera will emit the camera shutter sound each time a photo is taken. (To stop Time Lapse Photo, Press the Shutter Button again)

MODES OVERVIEW


There are 5 modes: Video Mode, Photo Mode, Setting Mode, Playback Mode and Wi-Fi Mode.

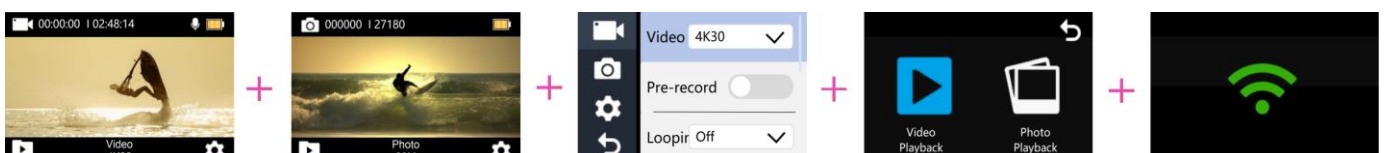

■ Video Mode

Video Mode is the default mode when you turn on the camera.

In Video Mode, press Shutter button, the camera will starts recording video,press Shutter button again to stop recording video.

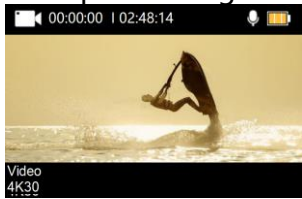

■ Photo Mode

In Video Mode, press Mode button once to switch to Photo Mode.

In Photo Mode, press Shutter button, the camera takes a photo.


(To stop Time Lapse Photo,Press the Shutter Button again)



■ Setting Mode

In Video / Photo Mode, press shortly the Up Button to enter.


In Setting Mode, you can customize your camera as requirements.

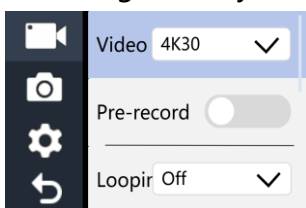

■ Playback Mode

In Video / Photo Mode, press shortly the Down Button to enter.


In Playback Mode, you can playback or deleted your video and photos.

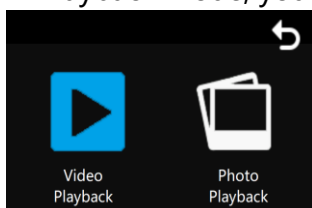

■ Wi-Fi Mode

In Video / Photo Mode, press and hold the Up Button seconds to enter.


In Wi-Fi Mode, you can control your camera remotely.

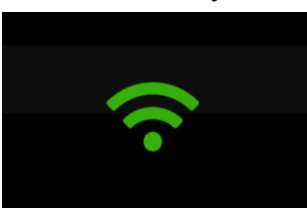

SHOOTING MODE SELECTION

There are 6 shooting modes: 3 Video modes+3 Photo modes

In Video/Photo mode, press and hold the Shutter Button for seconds to enter Mode Selection menu. Press the Up/Down Button to locate the target option and then press the Shutter Button shortly to switch to the desired mode. To exit, press the Power Button shortly.

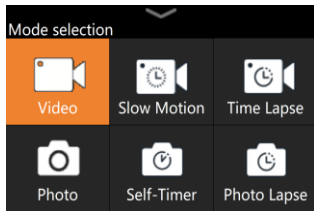

■ 3 Video Modes: Video, Time-lapse and Slow Motion.

● Video Mode

Video Mode is the default mode when you turn on the camera.



● Slow Motion Mode

Slow motion is an effect in film-making whereby time appears to be slowed down.



● Time Lapse Mode

Time Lapse Video creates video from frames captured at specific intervals. This lets you capture a time lapse event and immediately view or share it as a video. Time Lapse Video is captured without audio.



■ 3 Photo Modes: Photo, Self-Timer and Photo Lapse.

● Photo Mode


In Photo Mode, press Shutter Button shortly, the camera takes a photo.

If Burst Photo is on, press Shutter Button shortly, the camera will continuously capture 3 or 5 photos.



● Self-Timer Mode

A self-timer gives a delay between pressing the shutter release and the shutter's firing. It is most commonly used to let photographers to take a photo of themselves.

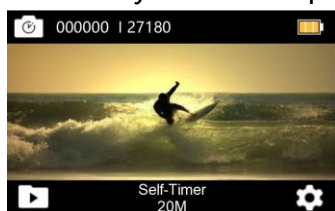


● Photo Lapse Mode

Time Lapse Photo captures a series of photos at specified intervals. Use this mode to capture photos of any activity, then choose the best ones later.



CUSTOMIZING YOUR CAMERA

There are 3 Setting Modes: Video Setting, Photo Setting and System Setting

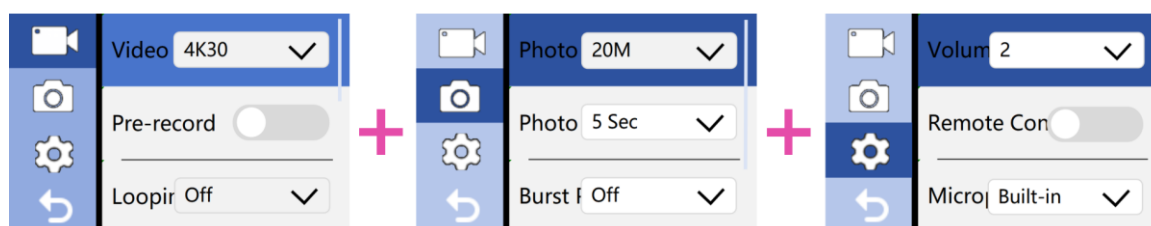

■ Video Setting Mode

1. Verified in Video Mode, Press shorty the "Up Button" to enter into Video Setting Mode directly.
2. Press the "Up Button" or "Down Button" to cycle through various options, press the "Shutter Button" to select the desired option.
3. To exit, press the "Power Button" switch to the "Return" icon in the bottom left corner of the screen ,and press the "Shutter Button".

■ Photo Setting Mode

1. Verified in Photo Mode, Press shorty the "Up Button" to enter into Photo Setting Mode directly. Or Verified in Video Setting Mode, press the "Mode Button" once to enter into Photo Setting mode.
2. Press the "Up Button" or "Down Button" to cycle through various options,
3. Press the "Shutter Button" to select the desired option.
4. To exit, press the "Power Button" switch to the "Return" icon in the bottom left corner of the screen ,and press "Shutter Button".

■ System Setting Mode

1. Verified in Video /Photo Setting Mode.
2. Press the "Mode Button" to switch to System Setting mode.
3. Press the "Up Button" or "Down Button" to cycle through various options, press the "Shutter Button" to select the desired option.
4. To exit, press the "Power Button" switch to the "Return" icon in the bottom left corner of the screen ,and press"Shutter Button".

CONNECTING TO WIFI APP

The Wi-Fi App lets you control your camera remotely using a smart phone or tablet. Features include full camera control, live preview, playback and sharing of selected content and more.

■ Download and Install FUN DV app

- **Option 1:** Download the **FUN DV** App or to your phone from the Google Play or Apple App Store.
- **Option 2:** Scan the QR code below to download the **FUN DV** App or to your phone.



Notes:

Google, Android, Google play, App Store and other marks are the trademarks of Google LLC.

■ Turn On / Off Camera Wi-Fi

● **Turn on Camera Wi-Fi:**

Turn on the camera, and verified it is in Video/Photo mode, press and hold the Up Button for seconds to turn on the camera's WIFI.

● **Turn off Camera Wi-Fi:**

In Wi-Fi Mode, press shortly the Up Button to turn off the camera's WIFI.


■ Connect to the FUN DV APP

- 1) Turn on Camera's Wi-Fi;
- 2) Turn on Wi-Fi Setting of your phone, connect to the Wi-Fi SSID named "Fun DV_xxxx (Random serial number)" or "Action Cam _xxxx (Random serial number)" .
- 3) Enter the password: "12345678" ;
- 4) Launch the app "Fun DV" on your phone

PLAYBACK

You can play back your content on the camera screen. You can also play back content by inserting the micro SD card directly into a computer or TV. With this method, playback resolution depends on the resolution of the device and its ability to play back that resolution.

2 Playback Modes: Video Playback Mode & Photo Playback Mode

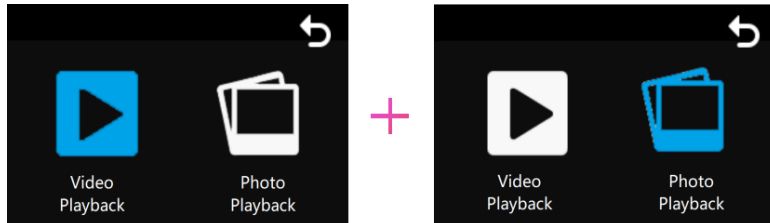

■ Playback videos and photos on your camera

1. Turn on camera and verified in Video/Photo Mode.
2. Press shortly the Down Button to enter playback mode.
3. Press Up/Down Button to cycle though target Playback mode and press Shutter Button to select desired Playback mode.
4. Press Up/Down Button to locate video files / playback photo files.
5. Press Shutter Button to start/pause play-backing video file.
6. To exit, press Mode Button.

Note: If your memory card contains a lot of content, it might take a minute for it to load.

■ Delete singe file on camera

1. Enter Video / Photo Playback mode.
2. Press Up/Down Button to locate video files / playback photo file you want to delete.
3. Press and hold the Up Button for seconds to enter the file deletion menu.
4. Press Up/Down Button switch to "Confirm" option.
5. Press Shutter Button to delete the selected file.

■ Playing back on Computer

To play back your video and photos on a computer, you must first transfer these files to a computer. Transferring also frees up space on your micro SD card for new content. To offload files to a computer using a card reader (sold separately) and your computer' s file explorer, connect the card reader to the computer, then insert the micro SD card. You can then transfer files to your computer or delete selected files on your card. Note that you must use a card reader to offload photos or audio files. With this method, playback resolution depends on the resolution of the device and its ability to play back that resolution.

Notes:

1. This camera might not be compatible with the files from different solution camera or other device.
2. The quick time player is a good compatibility with MOV format video files. We strongly recommend using the quick time player player to play back video files on your computer.

REMOTE CONTROLLER

Place the Remote Control On Your Wrist and Acquiesce Ultra-convenient Control For Hiking,Biking, Skiing,Bungee and more while installing the camera on your Helmet or other place.

■ Remote: Range: 5M

■ How to turn on/off the remote function

Select **ON/OFF** in the System Setting Menu to turn on/off the remote control.

Note: Verify the camera is in Video/Photo mode, if the camera is set in Playback or Setting Menu, the camera can not receive the remote signal and can not be controlled by the remote.

■ VIDEO

● **To start recording**

Press the Grey Video Button.

● **To stop recording**

Press the Grey Video Button again.



■ PHOTO

● **To take a photo**

Press the Red Photo Button. The camera will emit a camera shutter sound.

BATTERY

The camera contains sensitive components, including the battery. Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.

■ Battery Storage and Handling

- Do not store in temperature above 140°F/60°C.
- Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.
- Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer.
- Damage to the camera or battery caused by contact with liquid inside the camera is not covered under the warranty.
- Do not store your battery with metal objects, such as coins, keys or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.
- Do not make any unauthorized alterations to the camera. Doing so may compromise safety, regulatory compliance, performance, and may void the warranty.
- Please do not throw the camera or its battery to the garbage, find a specific recycling point for it.



WARNING:

- ◆ Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate or paint the camera or battery.
- ◆ Do not insert foreign objects into the battery opening on the camera.
- ◆ Do not use the camera or the battery if it has been damaged - for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

■ **Charging the Battery**

1. Connect the camera to USB power supply (5V/1A commended).
2. The charging status light remains ON while the battery is charging.
3. The charging status light will turn OFF when the battery is fully charged.

Notes:

- ✧ Charging time: 4-hours for 5V 1A power supply
- ✧ Please make sure the camera is shuttled down while charging.
- ✧ Remove the battery before using as a dash camera and use 5V/1A car charger.

■ **Maximizing Battery Life**

If the battery reaches 0% while recording, the camera saves the file and powers off.


To maximize battery life, follow these guidelines when possible:

- Turn off Wireless Connections
- Capture video at lower frame rates and resolutions
- Use Screen Saver setting.

WATERPROOF CASE

Specially designed for diving, surfing, snorkeling and other water sports activities. The waterproof case does not only offer greater waterproof protection to your camera, it also offers extra protection against dust, scratches and shocks. Light and easy to carry, excellent PMMA material endows it with high quality. With the use of the waterproof case, you can record activities even 30M under water and it won't damage the shooting effect, clear and vivid. Your movement and photographic effect won't be affected by anti-surf pressure. Convenient to link camera with other accessories mount through this waterproof case.


■ **How to open the waterproof case:**

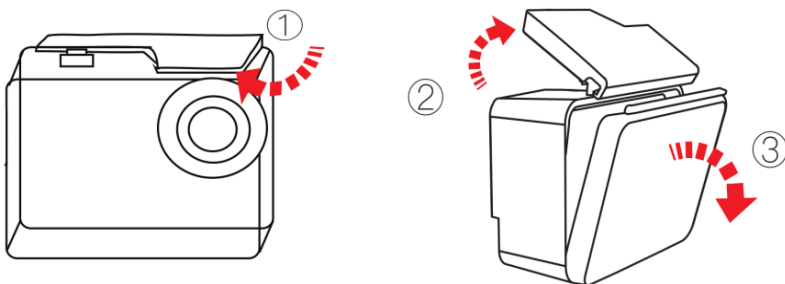

- 1) Pick the black latch up on the top of the case.
- 2) Pull up the buckle of the case.

- 3) Open the back cover of the case.

■ How to close the waterproof case:

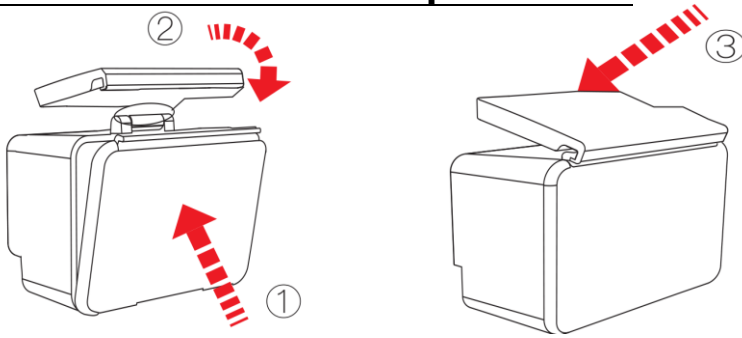

- 1) Please close the back door of the case.
- 2) Pull down the latch and lock it to the back door.
- 3) Press down the buckle.

Tips:

1. Please tear the protective films on the waterproof case lens before shoot/record;
2. To achieve better waterproof performance, the voice record within the waterproof case will be weakened.

■ Usage Notes

In order to ensure the waterproof performance, please carefully refer to the operation and maintenance precautions as following. The machine is not waterproof due to improper operation and improper maintenance, which is not covered by the warranty.

- In order to capture a clear video or photo, please tear off the lens protection film of the waterproof shell before use, and protect well the lens window from scratch after use.
- Before sealing the waterproof case, keep the camera housing's White Silicone Seal Ring clean, a single hair or grain of sand cause a leak. You can test by closing the case without inserting the camera. Submerge the case completely in the water for about a minute. Remove the case from the water, dry off its exterior with a towel, and then open the case. If the interior is dry, the case is safe for use under water.
- Before sealing the waterproof case, make sure the waterproof case is sealed well before use. If the white silicone sealing ring is found to be hardened, deformed or damaged, please stop using this water tank and replace the new waterproof shell in time
- Please dry it in time after use, otherwise the waterproof shell metal button will dust and reduce the waterproof performance. After use in in seawater or seaside, you will need to rinse the outside of the housing with fresh water and then dry. This will prevent corrosion of the hinge pin and salt buildup in the seal, which can cause failure. Do not flush the interior with water
- When use the camera with the waterproof in low temperature, such as Winter, Rainy Day, Underwater and so on, please do the anti fogging treatment so as to avoid the blurred video. It is recommended to add anti-fog film; insert the anti-fog film into the waterproof case to prevent the lens from fogging in low temperature or humid environment;
- Keep it safe from falling and dropping and high temperature above 80°C.

- Waterproof shell is vulnerable product, we strongly recommend ,according to the usage of the environment and frequency, to replace the waterproof shell in time.

SAFETY WARNINGS

- This is a 4K action camera, It is normal for the housing to exert heat under use. Don' t expose the product directly to high temperatures over 50°C.
- It require a name band Class10 or higher micro SD card,Format your SD card on the camera first before using.
- Keep it safe from falling and dropping.
- Do not place heavy objects on the camera.
- Keep it distance from any strong magnetic interference objects like electrical machine to avoid strong radio waves that might be damaging the product and affect the sound or image quality.
- Keep the camera away from water and liquids (unless equipped with waterproof case). This may cause the the camera to malfunction.
- Don' t place your Micro SD card near strong magnetic objects to avoid data error or loss.
- Must remove the battery before using as a dash camera and use brand-name 5v/1A car charger.
- In case of overheating, unwanted smoke or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
- Keep it safety from children while on charging.
- Do not use or turn off the camera while it is in charging.
- Stored the device in a cool, dry and dust free location.
- Do not attempt to open the case of the camera or modify it in any way,if the camera has been detached,the warranty will be void.

Specification could be subject to modification due to updating without notice, please regard the actual product as the standard form. If need the newest updated software,please contact our after sale service team!

CONTACT US

For any inquiries, issues or comments concerning our products, please send E-mail to the address below or call us. We will respond as soon as possible.

E-mail: cs@onlincam.com

Web: www.onlincam.com